

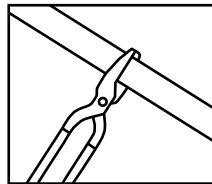


SRL Self-Regulating Low Temperature Heating Cable


- Self-Regulating, Energy Efficient
- 16 AWG Buss Wire
- Circuit Lengths to 660 Feet
- Maximum Continuous Exposure Temperature (Power Off) 185°F (85°C)
- Industrial Freeze Protection Applications
- Freeze Protection of Fire Protection System Piping
- 3, 5, 8 and 10 Watts per Foot
- 120 and 208-277 Volts Available From Stock
- Approximate Size 3/8" x 1/8"
- Minimum Bend Radius is 1-1/8"

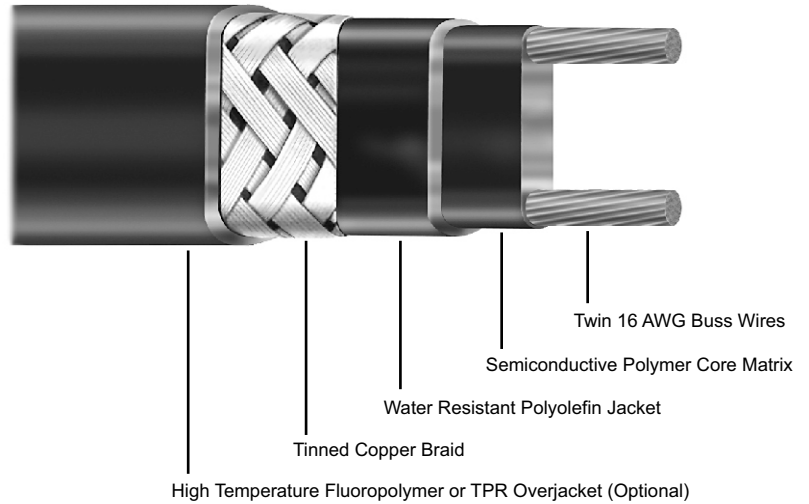


Cut to Any Length in Field

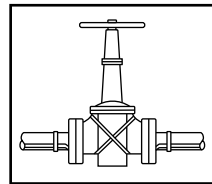

Can be Single Overlapped

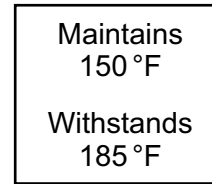

Low Temperature

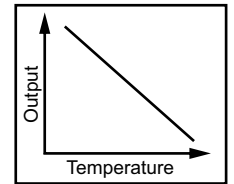

Self Regulating

Description:

Trasor SRL self-regulating heating cable provides safe, reliable heat tracing for freeze protection of pipes, valves, tanks and similar applications. Constructed of industrial grade 16 AWG buss wire with a tinned copper braid and optional overjacketing. SRL ensures operating integrity in Div. 2 hazardous environments as well as certain corrosive industrial environments. SRL heating cable has a maximum maintenance temperature rating of 150°F (65°C).

Features:

- Energy efficient, self-regulating SRL uses less energy when less heat is required.
- Easy to install, SRL can be cut to length in field.
- Field splices can be performed easily in minutes.
- SRL features lower installed cost than steam tracing, less maintenance expense, and less downtime.

- SRL can be single overlapped without burnout.
- Because SRL is self-regulating, overtemperature conditions are virtually impossible.
- Trasor termination, splice, tee and end seal kits reduce installation time.

Applications:

- Process Temperature Maintenance
- Freeze Protection of Pipes
- Fluid Flow and Viscosity Maintenance

SRL

Heating Cable System Design:

1. Calculate Heat Loss

Using the Trasor Design Guide (J-123) for Heat Tracing, calculate the heat loss of the system. To calculate the heat loss (Watts/ft) you will need to know the pipe diameter, insulation type and thickness, minimum ambient temperature and the pipe maintenance temperature. Contact factory for design guide or application recommendations.

2. Select Cable Rating


After calculating the heat loss for the pipe and adjusting for any application deviations, you may determine which cable rating to choose. Using the SRL Thermal Output Ratings graph, select the lowest cable rating that will provide the required wattage at the pipe maintenance temperature. Adjust the cable output for line voltage if necessary. See table 2 for cable output at alternative voltages. Example: If the heat loss for a pipe at 70 °F is 6 watts per foot, select curve "C" (SRL8) that will produce 7 watts per foot at 70 °F.

3. Determine Total Cable Length

In addition to the system piping, in-line equipment such as valves, flanges and pipe supports require additional heat tracing to maintain the system operating temperatures. Reference Trasor design guide (J-123).

Total cable length = Total feet of traced pipe + Cable allowance for components

Thermal Output Ratings On Insulated Metal Pipe:

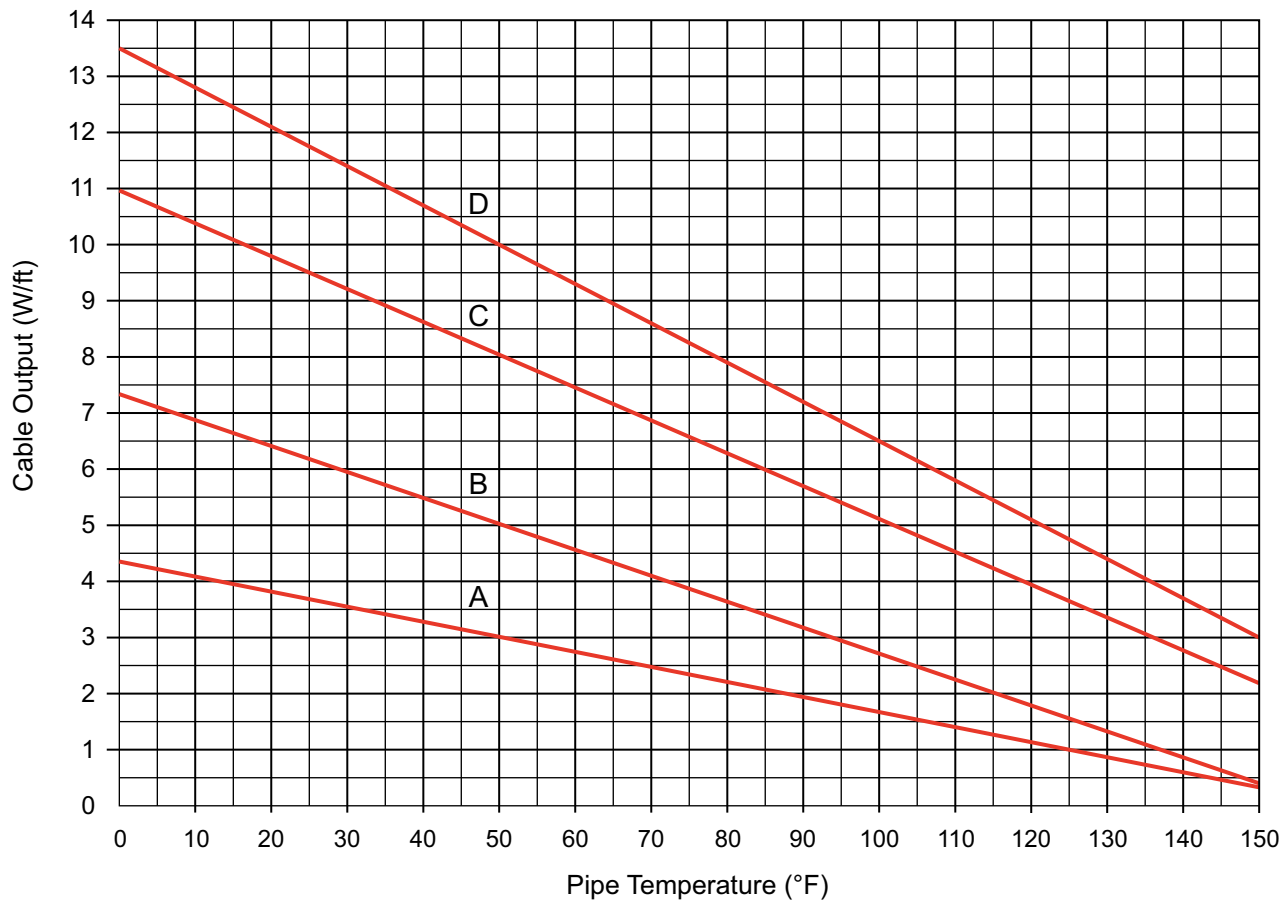

Conversions:

Watts/Meter = Watts/Foot x 3.28
°C = (°F - 32)/1.8

Output Curve	Model Number	W/Ft. @ 50 °F
A	SRL3	3 W/ft
B	SRL5	5 W/ft
C	SRL8	8 W/ft
D	SRL10	10 W/ft

SRL
Circuit Breaker Selection:

Circuit protection depends on the cable size being used and the start-up temperature. The National Electric Code (NEC 2002) requires the use of ground fault protection breakers for heating cable. A 30 mA trip is recommended to avoid nuisance tripping. The following chart shows the maximum circuit length for a given breaker rating, at different start-up temperatures.

Table 1

Watts/Foot	Start-up Temp.	Maximum Circuit Length (ft.) vs. Breaker Size (Amps)							
		120 Volt				240 Volt			
		15 A	20 A	30 A	40 A	15 A	20 A	30 A	40 A
3	50 °F	305	360	NR	NR	600	660	NR	NR
	0 °F	200	270	360	NR	415	555	NR	NR
	-20 °F	185	245	360	NR	370	495	660	NR
5	50 °F	185	250	NR	NR	375	505	NR	NR
	0 °F	135	180	270	NR	270	360	540	NR
	-20 °F	120	160	245	270	245	325	490	540
8	50 °F	150	200	NR	NR	285	375	NR	NR
	0 °F	110	145	215	NR	200	265	395	420
	-20 °F	100	130	200	210	175	235	350	420
10	50 °F	95	130	180	NR	160	210	315	360
	0 °F	80	105	155	180	125	170	255	340
	-20 °F	70	95	140	180	120	160	240	320

Thermal magnetic circuit breakers are recommended since magnetic breakers could “nuisance trip” at low temperature. NR = Not Required. Maximum circuit length has been reached in a smaller breaker size.

Cable Specifications and Ratings:
Table 2

Model Number	Operation Voltages (Vac)	Cable Output (W/ft) @ 50 °F					Maximum Circuit Length (ft)	T-Rating
		Standard Voltages		Alt. Voltages (Output Multipliers)				
		120 V	240 V	208 V	220 V	277 V		
SRL3-1C	120	3	-	-	-	-	360	T6
SRL3-2C	208-277	-	3	2.4 (0.80)	2.6 (0.87)	3.4 (1.15)	660	T6
SRL5-1C	120	5	-	-	-	-	270	T5
SRL5-2C	208-277	-	5	4.1 (0.82)	4.5 (0.90)	5.6 (1.13)	540	T5
SRL8-1C	120	8	-	-	-	-	215	T5
SRL8-2C	208-277	-	8	6.9 (0.86)	7.3 (0.91)	9.0 (1.12)	420	T5
SRL10-1C	120	10	-	-	-	-	180	T4A
SRL10-2C	208-277	-	10	8.7 (0.87)	9.2 (0.92)	11.1 (1.10)	350	T4A

- ① Use multiplier to adjust cable output from output graph at temperatures other than 50 °F
- ② See Table 1 for maximum circuit lengths by start-up temperature and breaker size.
- ③ T-Rating codes define the maximum surface temperature that the equipment will reach. Used in hazardous areas. Reference National Electric Code.

SRL

Ordering Information:

SRL = Self-Regulating, Low Temperature Heating Cable

SRL - C

Power Rating

- 3 = 3 Watts/foot
- 5 = 5 Watts/foot
- 8 = 8 Watts/foot
- 10 = 10 Watts/foot

Voltage Rating

- 1 = 120 V
- 2 = 208-277 V

Braid

- C = Tinned-copper metallic braid for ground path.
Standard on all cables.

Optional Overjackets

- T = Fluoropolymer corrosion resistant overjacket over braid for hostile corrosive environments
- R = TPR overjacket over braid for protection against certain inorganic chemical solutions

To Order: Specify length, model number, and installation accessories.

Example: SRL5-1CT, 5 W/ft heating cable @ 120 V with fluoropolymer overjacket.

Cable Weight/1000 Ft. (lbs)	
-C	53
-CT	66
-CR	64

Accessories:

Trasor has a complete line of accessories specifically designed for use with SRL cable. Use only Trasor accessories to ensure the performance of the heat trace system.

Table 3

Accessory	Part Number	Description
Thermostats	DTS-HAZ	Pipe-sensing thermostat, electronic, Div. 2 hazardous areas
	RTAS	Air-sensing thermostat, mechanical
	RTAS-EP	Air-sensing thermostat, mechanical, Div. 2 hazardous areas, 250V maximum
	RTBC	Pipe-sensing thermostat, mechanical
	RTBC-EP	Pipe-sensing thermostat, mechanical, Div. 2 hazardous areas, 250V maximum
Connection Kits	UPC	Power connection kit with stand-off
	UMC	Splice and tee kit with stand-off
	UES	End seal kit with stand-off
	UESL	Lighted end seal kit
	RTPC	Power connection kit
	RTST	Splice and tee kit
Pipe Straps	RTES	End seal kit
	PS-1	Pipe strap to mount power connection box to pipe, 1/2 - 3/4" pipes
	PS-3	Pipe strap to mount power connection box to pipe, 1 - 3" pipes
	PS-6	Pipe strap to mount power connection box to pipe, 3 - 6" pipes
	PS-14	Pipe strap to mount power connection box to pipe, 6 - 14" pipes
PS-18	Pipe strap to mount power connection box to pipe, 14 - 18" pipes	
Fiberglass Tapes	FGT-66-S	Fiberglass tape with silicone adhesive, 66' roll x 1/2". Ideal for freezing installation temperatures and stainless steel pipes.
	FGT-66	Fiberglass tape with rubber adhesive, 66' roll x 1/2"
	FGT-180	Fiberglass tape with rubber adhesive, 180' roll x 3/4"
Aluminum Tapes	HTF-150-3	Aluminum tape to enhance heat transfer, 150 foot roll. Apply over cable along entire length of circuit.
Caution Labels	EHTL-5	"Electric Heat Tracing" caution labels, 5 per package. Install every 20 feet.